

# Installing the Conference Phone 2220

This diagram represents a typical installation. For more information, refer to [support.starleaf.com/documentation](http://support.starleaf.com/documentation). Before installing the Conference Phone 2220, read the safety information at [www.starleaf.com/safety](http://www.starleaf.com/safety).

## Touch 2035




The recommended distance between Touch 2035 and Conference Phone 2220 is at least 50cm (20").

StarLeaf Controller Only



**Tip:** Mute/Unmute the Conference Phone by touching the illuminated panels

## Room system and network connection

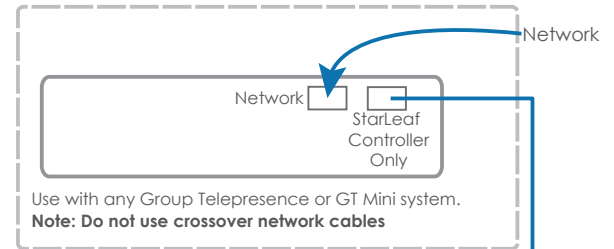

**Microphone 0155**  
(Optional)

The recommended minimum distance between a Microphone 0155 and Conference Phone 2220 is at least 1.2m (4').



**Conference Phone 2220**


USB 1

**Microphone 0155**  
(Optional)

DATA PWR  
OUT

DATA IN

Power

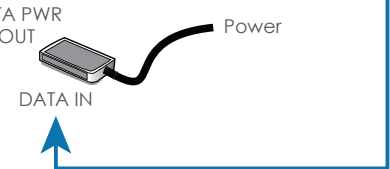

**PoE++ Power Injector**  
(Included with Conference Phone)