

# Using an audio injector with the GTm 5250

If you want sound to emanate from the speakers of the meeting room screen, install the audio injector between the GTm 5250 and the screen, as shown below.



The dip switches on the audio injector must be correctly set. All dip switches must be zero except Mode switch 0, which must be set to 1. This is shown below.

