


# StarLeaf Pronto 210 Installation Guide



Before installing Pronto 210, read the safety and compliance information at: [support.starleaf.com/safety](https://support.starleaf.com/safety)

All the components and cables you need for this installation are included in the box

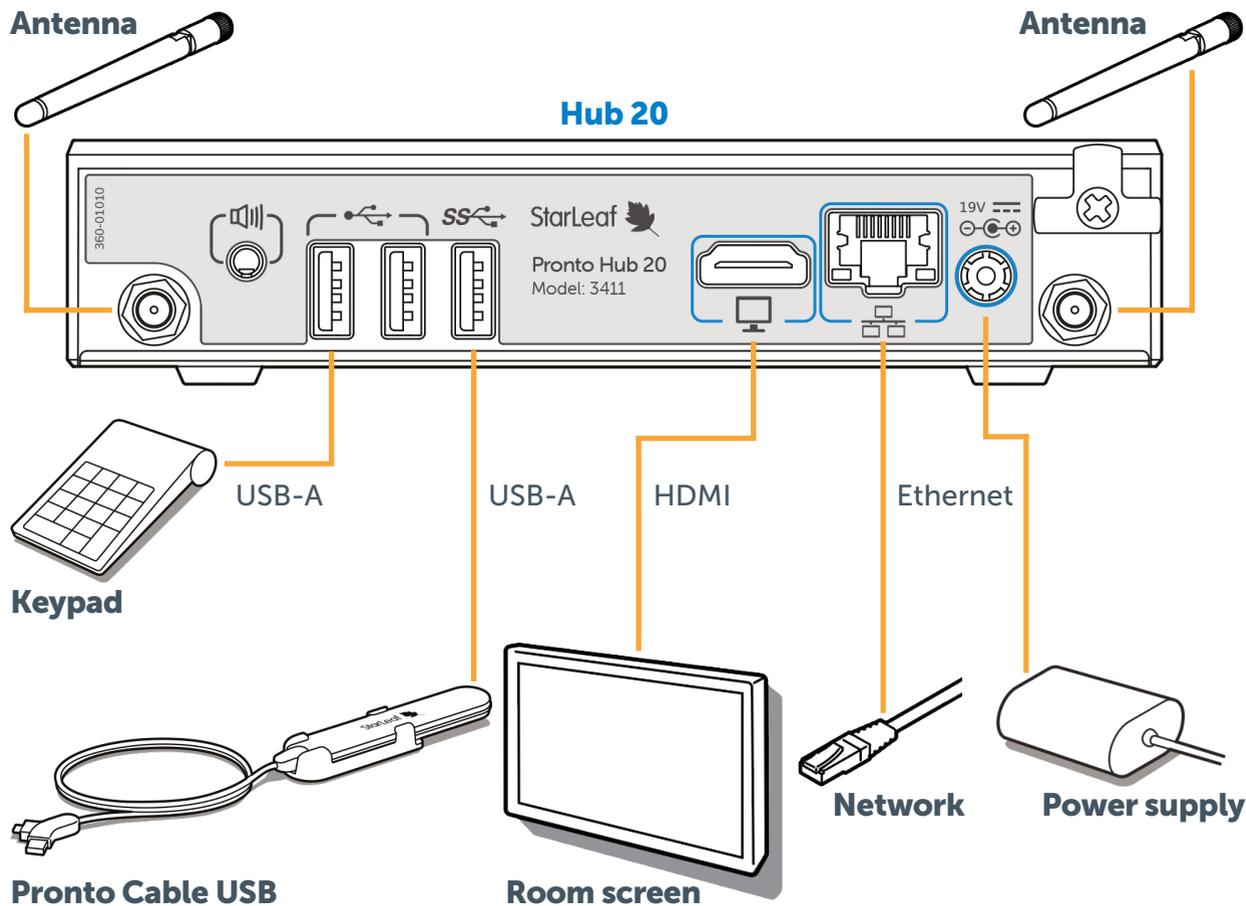

## How to install Pronto 210

1. Screw both antennas into **Hub 20**. If you want to place Hub 20 behind a room screen, make sure that there is enough space
2. Connect the network, room screen, and keypad to **Hub 20**. Connect **Pronto Cable USB** to enable wired sharing for your meeting room
3. Connect the power supply to **Hub 20**. It may take a few minutes to initialize
4. Enter the QuickConnect code using the keypad. To generate the QC code, admins must add **Hub 20** to their StarLeaf Portal
5. When provisioning is complete, your room screen will display the idle instructions screen until content is presented


## How to generate a QuickConnect code

1. Go to the **Room Systems** page on your Admin portal and click **Add room system**
2. Complete all required fields and ensure you select **StarLeaf Hub 20** in the **Hardware endpoint** section
3. Click **Apply**. The QC code appears in the **Hardware endpoint** section

# StarLeaf Pronto 210 Installation Guide



The following installation shows how to add wireless sharing to a StarLeaf room system which has **GT Mini 3330** and **Touch 2045** already installed

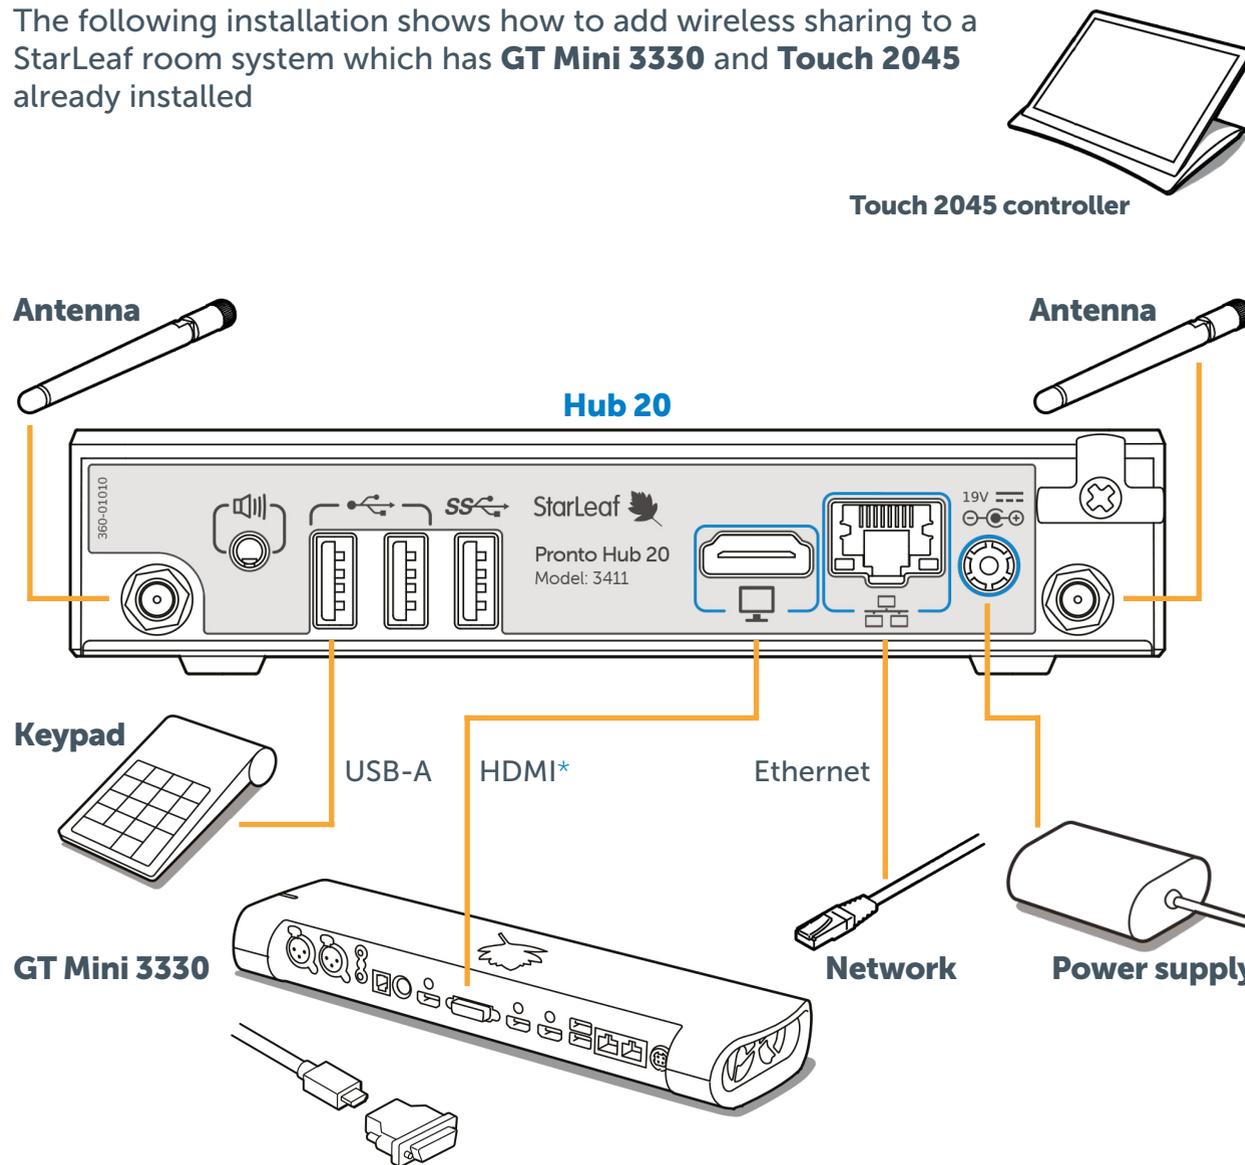

\*Use the DVI-I adapter to connect the HDMI cable to the codec

## How to install (with GT Mini 3330)

1. Screw both antennas into **Hub 20**. If you want to place Hub 20 behind a room screen, make sure that there is enough space
2. Connect the network, room screen, and keypad to **Hub 20**.
3. Connect **Hub 20** to the **Computer In DVI-I** port of your room system's codec using the HDMI cable and DVI-I adaptor provided
4. Connect the power supply to **Hub 20**. It may take a few minutes to initialize
5. Enter the QuickConnect code using the keypad. To generate the QC code, Admins must add **Hub 20** to their StarLeaf portal
6. When provisioning is complete, the room screen will turn to the idle screen until content is presented

## How to generate a QuickConnect code

1. Go to the **Room Systems** page on your Admin portal and click **Add room system**
2. Complete all required fields and ensure you select **StarLeaf Hub 20** in the **Hardware endpoint** section
3. Click **Apply**. The QC code appears in the **Hardware endpoint** section