



Read this first: Installing Pronto 4100

This information represents a Pronto 4100 installation for (A) StarLeaf Touch 2036 and (B) StarLeaf Touch 2035 and room system codec.
For more information about installing Pronto with your StarLeaf room system, go to support.starleaf.com/installing

Pack contents

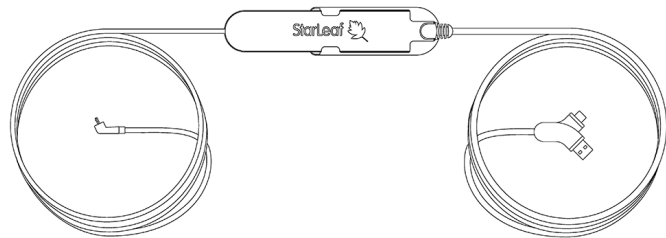


Pronto

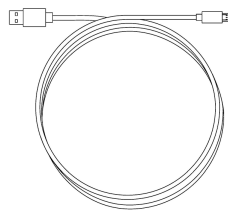


Alternative USB-A cable

 
Cable connectors




Pronto

 

Angled micro
USB-B

 

Micro USB-B

 


USB-A

Option (A) Install with a StarLeaf Touch 2036


Pronto comes with an angled micro USB-B cable fitted.

1. Connect this angled cable to the micro USB port on the underside of the Touch 2036.
2. Remove the cable tie from the bottom of this page.
3. Secure the cable tie tightly around the Ethernet cable and the angled cable to position them as shown in the image below.

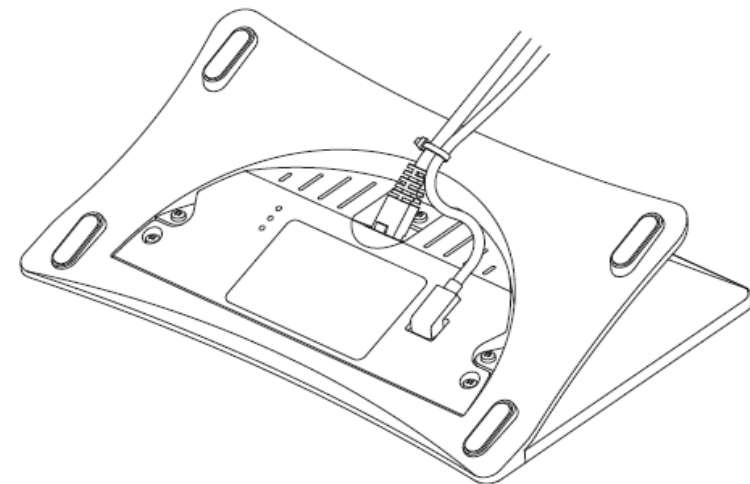

Identify your StarLeaf Touch


Touch

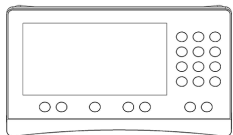

On the underside of every Touch is a label identifying whether it is a 2036 or 2035.


- For a Touch 2036, follow **Option (A)** instructions
- For a Touch 2035, you must connect Pronto directly to the room system codec. Follow **Option (B)** instructions overleaf

 Codec



Option (B) Install Pronto with a StarLeaf Touch 2035 or room system codec


If you have a Touch 2035 you must connect Pronto directly to the room system codec. To do this, you must first remove the angled micro USB-B cable that is fitted to Pronto and replace it with the alternative USB-A cable. Follow the instructions below.

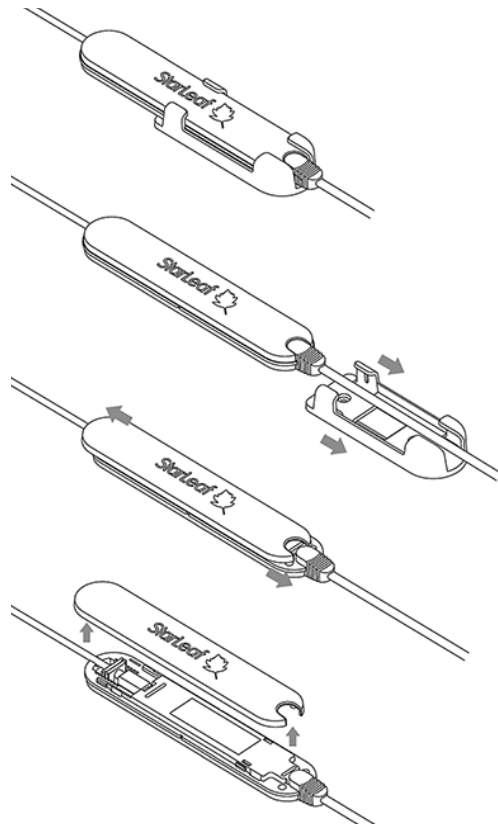

1. Slide off the mounting bracket from Pronto.


2. Slide open Pronto and remove the cover.

3. Remove the two cable restraints from Pronto and set aside.

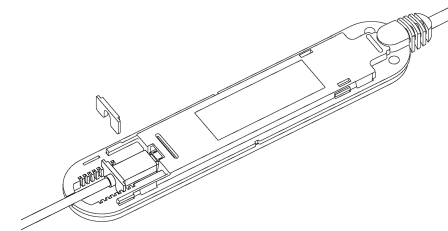

4. Remove the micro USB-B cable from Pronto and replace it with the alternative micro USB-B cable that has a USB-A connector at the other end.

 
5. Replace the two cable restraints **tight against the connector end to ensure that the cable remains in place**. You can fit the restraints in either orientation to get the best hold.



6. Replace the cover of Pronto.

7. Slide Pronto back into the mounting bracket (if you require this).

 8. Connect the straight USB-A connector of the alternative cable to the top USB port on the rear of the room system codec.



USB-A

